



ARS SEDENDI®


SELLEO®









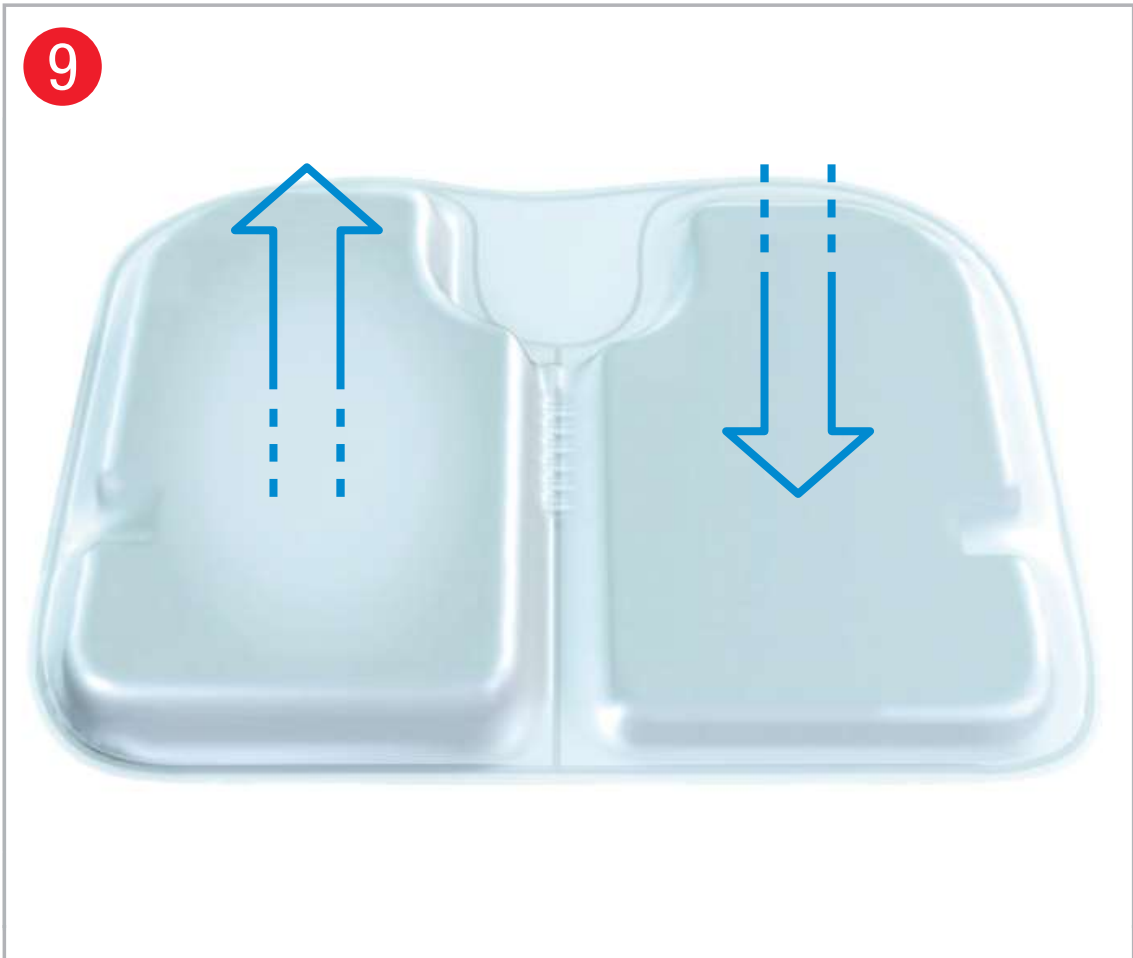



Please notice the following informations concerning the correct adjustment of your new SELLEO®!

- 1 **Seat height adjustment**
Continuously adjustable via lever.
- 2 **Adaption to weight / Counter pressure of backrest**
Via pull-out handwheel, you can adjust the tension of the backrest by turning it. Turning forward increases the pressure, turning backwards reduces it.
- 3 **Armrests option**
2D-AL 62. In height adjustable via button beneath the armpad. Adjustable in width by quick-release lever.
3D-AL 63. Adjustable as AL 62. Armpads adjustable in depth by sliding to the front and back.
4D-AL 54 + AL 54 LE. Adjustable as AL 63, 30° turnable armpads.
5D-AL 55. Adjustable as AL 63, armpads 360° rotatable, adjustable in depth and movable inwards and outwards.
4D-AL 18. In height adjustable via button beneath the armrest. In depth adjustable by sliding the armrest. 30° turnable armpads. Adjustable in width by quick-release lever.
AL 17. In height and width adjustable as AL 18.
AL 07. In height and width adjustable as AL 18.
- 4 **Vertical backrest adjustment via up & down-technique**
By grid-technique the backrest can be adjusted 8 cm in height.

- 5 **Sliding seat** option
By pulling out the key lever, you can adapt the seat depth to your personal requirements.
- 6 **Adjustable KÖHL-Lumbar-Support KBS®** option
By turning the handwheel to the right, the vaulting of the backrest will be adapted exactly to the shape of your spine. This guarantees a supported, upright seating position.
- 7 **Disengaging of the synchronised movement**
By pushing down the lever you release the backrest = dynamic sitting. By pulling it up you can lock the backrest in any position.
- 7a **Seat tilt adjustment**
By pulling out the lever the seat inclines for additional 4° forward, pushing the lever back inside deactivates this function.
- 8 **Headrest** option
Easy pulling up or pushing down by grid setting. Individually adjustable inclination.
- 9 **KÖHL® AIR-SEAT** option
By pressing the comfort AIR valve, located behind the red dot, you can adjust the AIR volume of the seat to your personal requirements. If you press the valve while you are not sitting, the KÖHL® AIR-SEAT automatically fills with air. When you press the valve while sitting, the air escapes slowly so that you gently adjust your personal sitting comfort.